

OPERATOR MANUAL

- **20**

- **26**

(Tractor with 6+2 Speed Transmission)

INTERNATIONAL TRACTORS LIMITED
HOSHIARPUR (INDIA)

Phone: +91-1882-302-525/526

E-mail: exports@sonalika.com

YOUR RIGHTS

While taking delivery of new ITL Tractor, kindly ask the dealer to give following items*:

1. Tool kit* which includes

- | | |
|----------------------|------|
| • Screw Driver | 1 pc |
| • Cutter Plier | 1 pc |
| • D-spanner 10X11 | 1 pc |
| • D-spanner 12X13 | 1 pc |
| • D-spanner 14X17 | 1 pc |
| • D-spanner 18X19 | 1 pc |
| • D-spanner 20X22 | 1 pc |
| • D-spanner 30X32 | 1 pc |
| • Ring spanner 24X27 | 1 pc |
| • Ring spanner 16X17 | 1 pc |

2. Farmer kit* which includes

- | | |
|-------------------------|------|
| • Fuel Filter Cartridge | 3 pc |
| • Linch Pin | 3 pc |
| • Tyre Pressure Gauge | 1 pc |
| • Fuse Set | 1 pc |
| • Fuel Tank Cap | 1 pc |
| • Radiator Cap | 1 pc |
| • Fan Belt | 1 pc |
| • Air Cleaner Hose | 1 pc |
| • Fuel Filter Body | 1 pc |

3. Other Items

- | | |
|----------------------------------|------|
| Battery Warranty Card (optional) | 1 pc |
| Operator Manual | 1 pc |

4. To avail the services.

5. To call dealers any time for any breakdown.

* Items may vary model to model.

PREFACE

Dear Customer,

We welcome you with great pleasure for joining ITL family and thanks for faith and trust you have placed in the careful selection of your tractor.

We are sure that our dealer must have taken good care while delivering tractor upto your satisfaction.

Before using tractor, it is recommended to read this manual thoroughly. Any person who uses the tractor should be also advised to read these instructions.

Daily and routine maintenance operations can be easily performed with the use of this manual. To get best and trouble free performance from you tractor. Please ensure for periodic maintenance as per recommended schedule in the owner's manual at authorized dealership.

Use only genuine ITL spare parts from dealer/stockist for reliable and durable performance.

Information provided in this operator manual is accurate at the time of printing. Improvements and modifications are a continuous process at **International Tractors Limited (ITL)**, therefore ITL reserves the right for modification at any time without prior notice.

For any help/support feel free to call our dealership with the tractor details like Engine number and Chassis number.

We wish you prosperity and growth.

Export Department

INTERNATIONAL TRACTORS LIMITED

Vill.-Chak Gujran, P.O. Piplanwala 146022

Jalandhar Road, Hoshiarpur, Punjab, India.

Phone: +91-1882-302-525/526

E-mail: exports@sonalika.com

This publication has been written in compliance with International Standard ISO 3600 'Guide for information, contents and presentation of operation and maintenance manuals supplied with tractors and machinery for agricultural and forestry use.

OWNERSHIP AND TRACTOR DETAILS

OWNER'S NAME & ADDRESS	_____
	_____TEL.NO. _____

Model :	Delivery Date :
Chassis No. :	Bill No. / Date :
Engine No. :	Alternator Make / Sr. No. :
Battery Make / Sr. No. :	Starter Motor Make / Sr. No. :
FIP Sr. No. :	Hydraulic Pump Make / Sr. No. :

Tyre	Make	Size	Sr. No.
Front (Left)			
Front (Right)			
Rear (Left)			
Rear (Right)			

I have understood all the terms & conditions of the maintenance of the tractor, terms of warranty, systems, Scheduled services & understood operation of tractor in the field and other operations.

Received a new defect free tractor Chassis No.

Engine No. & fully satisfied with the transaction.

OWNER'S SIGNATURE	DEALER STAMP & SIGNATURE
	PH. NO. DATE:

*** IMPORTANT INFORMATION TO CUSTOMER:** For any assistance with regard to our product, please contact our authorized dealer or authorized service center.

--

CUSTOMER COPY

OWNERSHIP AND TRACTOR DETAILS

OWNER'S NAME & ADDRESS	_____
	_____TEL.NO. _____

Model :	Delivery Date :
Chassis No. :	Bill No. / Date :
Engine No. :	Alternator Make / Sr. No. :
Battery Make / Sr. No. :	Starter Motor Make / Sr. No. :
FIP Sr. No. :	Hydraulic Pump Make / Sr. No. :

Tyre	Make	Size	Sr. No.
Front (Left)			
Front (Right)			
Rear (Left)			
Rear (Right)			

I have understood all the terms & conditions of the maintenance of the tractor, terms of warranty, systems, Scheduled services & understood operation of tractor in the field and other operations.

Received a new defect free tractor Chassis No.

Engine No. & fully satisfied with the transaction.

OWNER'S SIGNATURE	DEALER STAMP & SIGNATURE
	PH. NO. DATE:

*** IMPORTANT INFORMATION TO CUSTOMER:** For any assistance with regard to our product, please contact our authorized dealer or authorized service center.

INDEX

DESCRIPTION	PAGE NO.
CHAPTER 1: INTRODUCTION & IDENTIFICATION	
1.1 Using Operator Manual	12
1.2 Chassis Serial Number	13
1.3 Engine Serial Number	13
1.4 Statutory Plate.....	13
1.5 ROPS Certificate Plate.....	13
1.6 Universal Symbols	14
CHAPTER 2: WARRANTY & SAFETY	
2.1 Introduction	15
2.2 Warranty, Pre-delivery and Installation	15
2.3 Warranty Procedure	16
2.4 Parts Warning	16
2.5 If You Move	16
2.6 Service After Warranty	16
2.7 Guidelines about Safety Sign.....	17
2.8 Safety: Prepare For Safe Operation	18
Safety Notes	19-32
Safety While Operating Loader Attachments	32
Safety From Lightning Strike.....	33
Noise & Vibration Levels	33
CHAPTER 3: INSTRUMENTS & CONTROLS	
3.1a Tractor Controls for 20 model	34
3.1b Tractor Controls for 26 model	35
3.2.a Instrument Panel for 20 model.....	36
3.2.b Instrument Panel for 26 model.....	37
3.2.1 Fuel Gauge	38
3.2.2 Engine Oil Pressure Gauge	38
3.2.3 Left Turn Indicator	39
3.2.4 Right Turn Indicator.....	39
3.2.5 Gear Lever Position Indicator	39
3.2.6 Temperature Gauge	40
3.2.7 Cold Start Indication.....	40
3.2.8 Battery Charge Indicator	40
3.2.9 Engine RPM cum Hour Meter	41
3.2.10 Air Cleaner Clogging Indicator	41
3.2.11 High Beam Indicator	41
3.3a Dashboard Controls for 20 model	42
3.3b Dashboard Controls for 26 model	45
3.4 Fuse Box.....	46
3.5 Tractor Lights	47
3.6 Driver's Seat	48
3.7 Tool Box	48
3.8 Registration Plate.....	49
3.9 Seven Pin Socket.....	49

INDEX

DESCRIPTION	PAGE NO.
CHAPTER 4: OPERATION	
4.1 Boarding the Tractor	50
4.2 Leaving the Tractor	50
4.3 Engine	50
4.3.1 Starting the Engine	50
4.3.2 Cold Weather Starting	50
4.3.3 Running in	51
4.3.4 Turning off the Engine	51
4.4 Under Hood Muffler (Optional)	52
4.5 Opening the Bonnet	52
4.6 Closing of Bonnet	52
4.7 Accelerator Pedal	52
4.8 Clutch Pedal	52
4.9 '2WD / 4WD' Lever	53
4.10 Hand Throttle Lever	53
4.11 Gear Shifter Lever	54
4.12 Power Take off (PTO)	54
4.13 Hydraulic Coupling Devices	57
4.14 Power Steering (26 model)	57
4.15 Transport Lock (Response Valve)	58
4.16 Hi-Low Lever	58
4.17 Differential Lock Pedal	59
4.18 DCV Lever (Optional feature)	59
4.19 Service Brakes	60
4.20.1 Parking Brake for 20 model	60
4.20.2 Parking Brake for 26 model	60
4.21 Gear Speed Chart	61
4.22 Wheels and Tyres (Tyre Inflation Pressure & Load Carrying Capacity)	62
4.23 Check Wheel Nut Bolt	63
4.24 Ballasting of Tyre	63
4.25.1 Hydraulic System for 20 model	63
4.25.2 Hydraulic System for 26 model	64
4.26 Three Point Linkage	64
4.27 Safety Frame: Roll Over Protection Structure (ROPS) (Optional)	66
CHAPTER 5: MAINTENANCE	
5.1 Maintenance Schedule	67
5.2.1 Fuel Tank Filling	69
5.2.2 Fuel Requisites	69
5.2.3 Fueling	69
5.2.4 Fuel Storage	69
5.3.1 Checking Engine Oil Level	70
5.3.2 Replacement of Oil Filter & Engine Oil	70
5.4 Replacement of Fuel Filter	71
5.5 Air Bleeding of Fuel System	72
5.6 Radiator	72

INDEX

DESCRIPTION	PAGE NO.
5.6.1 Coolant Level in Radiator (When Hot)	72
5.6.2 Radiator Draining & Flushing (When cold).....	73
5.6.3 Radiator Fins Cleaning	73
5.6.4 Radiator Cap	73
5.7 Inspection of Hoses	73
5.8 Air Cleaner Maintenance	74
5.9 Clutch Pedal.....	75
5.10 Foot Brake Pedals	75
5.11 Steering Cylinder Knuckle Joints (For 26 model)	76
5.12 Oil Changes in 4WD Front Axle	76
5.13 Oil Changes for Transmission, Rear Final Drives and Power Lift Hydraulic Circuits	76
5.14 Recommended Oil grades & Application range (For 26 model).....	77
5.15.1 Cleaning of Suction Strainer (Option in 26 model).....	78
5.15.1 Cleaning of Suction Strainer Filter (Option in 20 model).....	78
5.16 General Maintenance of Electrical System	79
5.17 Battery and its Maintenance	79
5.18 Starter Motor	80
5.19 Alternator.....	80
5.19.1 Checking V-belt.....	80
5.19.2 Adjusting V-belt tension.....	80
5.20 Fuses in Fuse Box	81
5.21 Long Idle Period	82
5.22.1 Greasing Points in 20 tractor model.....	83
5.22.2 Greasing Points in 26 tractor model.....	84
5.23 Jack Up the Tractor - Lifting Points	85
5.24 Oil and Lubrication Chart	86
5.25.1 Electrical Wiring Diagram for 20 model.....	87
5.25.2 Electrical Wiring Diagram for 26 model.....	88
CHAPTER 6: TECHNICAL SPECIFICATIONS	
6.1 Technical Specifications	89
6.2.1 Matching Implements for 20 model	91
6.2.2 Matching Implements for 26 model	92
CHAPTER 7: DO'S AND DON'TS	94
CHAPTER 8: TROUBLESHOOTING, SERVICE RECORD & ALPHABETICAL INDEX	
Troubleshooting	97
Service Record.....	99
Alphabetical Index.....	100

INTRODUCTION & IDENTIFICATION

1.1 Using this Operator Manual

This manual is an important part of your tractor and it should be kept with the tractor even when you sell it.

Reading this manual will help you and others avoid personal injury or damage to the tractor. Information provided in this manual will help you to use the tractor in safest and effective way.


If you have an attachment, use the safety and operating information in the attachment operator's manual along with the tractor operator's manual to operate the attachment safely and correctly.

This manual and safety signs on your tractor may also be available in various languages (contact your dealer for more information).

The tractor shown in this manual may differ slightly from your tractor, but will be similar enough to help you understand our instructions.

Throughout this manual, the use of terms Left Side, Right Side, Front Side and Rear Side must be understood, to avoid any confusion when following these instructions. The Left and Right means left and right sides of the Tractor when facing in the direction of forward travel, reference to the Front indicates the radiator end of the Tractor, while the Rear, indicates the draw bar end.

Always specify the tractor Chassis and Engine serial numbers when you need replacement parts. This will facilitate correct & faster delivery of required parts from the dealer. For easy reference, we suggest you to record these numbers in the space provided in the 'Ownership and Tractor details' page before this Chapter.

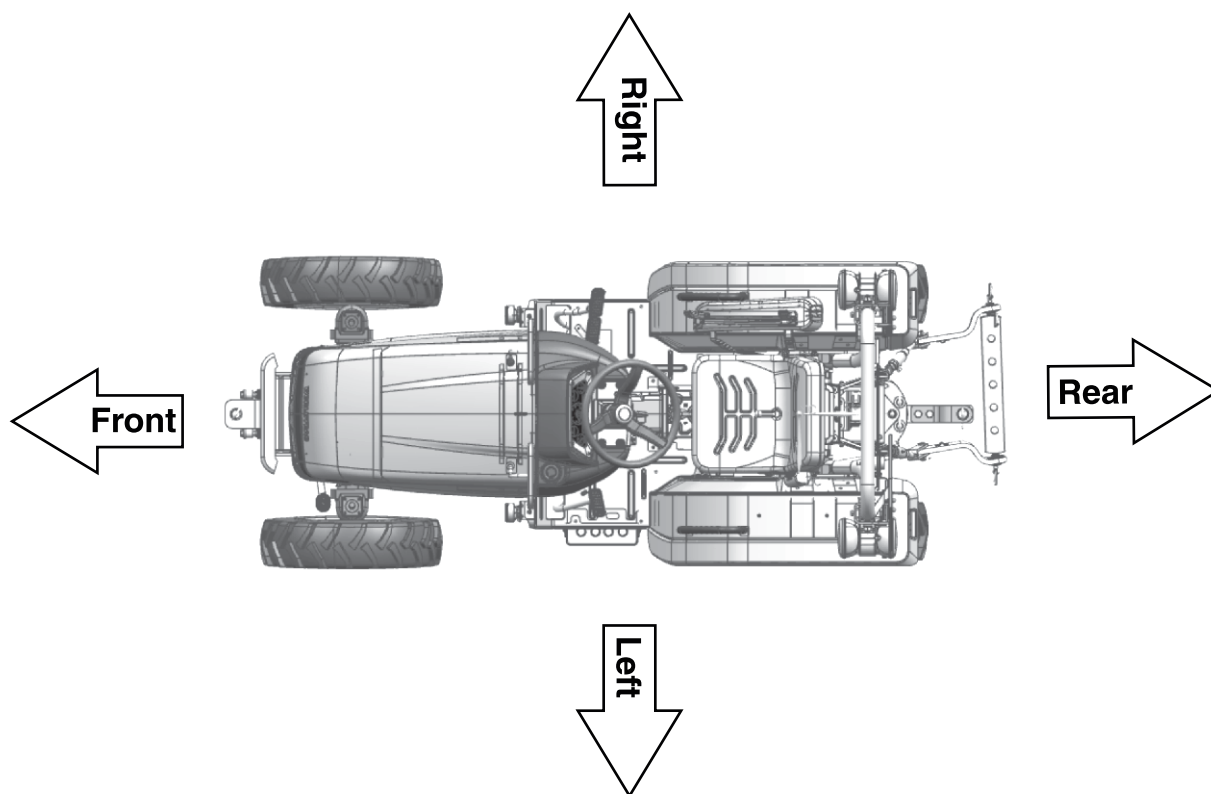

INTRODUCTION & IDENTIFICATION

1.2 Chassis Serial Number (A): Chassis number is punched on right side of front axle bracket of the tractor (See Fig. A). Should you find the number difficult to read, you will also find it on the Statutory plate.

1.3 Engine Serial Number (B): The engine serial number is stamped on the upper side of the Fuel Injection Pump installation part located in the right side of cylinder block. For easy reference, engine serial number is also mentioned on valve cover of the engine (see Fig. B).

1.4 Statutory Plate (C): Chassis number is also engraved on Statutory plate. Statutory plate is located on left hand side fender (Fig. C1 & C2).

1.5 ROPS Certificate Plate (D) - Optional: ROPS certificate plate is riveted on ROPS. Information about ROPS serial number and tractor model is engraved on ROPS plate. For countries under EEC, ROPS Certificate plate is used as shown in Fig. D.

SONALIKA	
MAKE INTERNATIONAL TRACTORS LTD.	YEAR
MODEL	
ENGINE SERIAL NO.	CHASSIS SERIAL NO.
MAX. PTO POWER kw (hp)	S.F. CONSUMPTION g/kwh (g/hph)
INTERNATIONAL TRACTORS LTD. HOSHIARPUR, PUNJAB (INDIA)	

Fig. C2. Statutory Plate (Regular)

SONALIKA INTERNATIONAL TRACTORS LTD.	
Type:	
EEC number:	
Identification number:	
Total permissible mass (*):	to kg
Permissible front axle load (*):	to kg
Permissible rear axle load (*):	to kg
(*) depending on the tyres.	
Permissible towable mass:	
Unbraked towable mass:	kg
Independently-braked towable mass:	kg
Inertia-braked towable mass:	kg
Towable mass fitted with an assisted braking system : (hydraulic or pneumatic)	kg
INTERNATIONAL TRACTORS LIMITED HOSHIARPUR, PUNJAB (INDIA)	

Fig. C1. Statutory Plate (EEC)

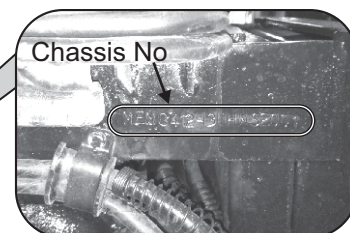


Fig. A. Chassis Serial Number

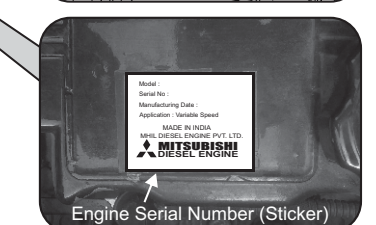
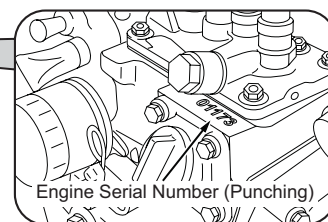


Fig. B. Engine Serial Number

SV₁	INTERNATIONAL TRACTORS LIMITED
e11	TRACTOR TYPE T 2
3056	ROPS Serial No. _____
Tractor Model	_____

Fig. D. ROPS Certificate Plate (EEC)

INTRODUCTION & IDENTIFICATION

1.6 Universal Symbols

As a guide to the operation of your tractor, various universal symbols have been utilized on the instruments, controls and other places on tractor. The symbols are shown below with an indication of their meaning.

	Read Operator's Manual		Fast
	Safety Alert Symbol		Slow
	Fuel Level		Engine Coolant-Temperature
	Engine Rotational Speed		PTO 540
	Parking Brake		PTO 540 Economy
	Air Cleaner Clogging Sensor		Differential Lock
	Battery Charging Condition		Hydraulic Control-Lowered Position
	Engine Oil-Pressure		Hydraulic Control-Raised Position
	Turn Signal		Engine Speed Control
	Power Take-Off Clutch Control-Off Position		Remote Cylinder-Retract
	Power Take-Off Clutch Control-On Position		Remote Cylinder-Extend
	Hazard Warning Lights		Engine Stop
	Master Lighting Switch		
	Parking Brake Indication		
	Headlight-Low Beam		
	Headlight-High Beam		
	Audible Warning Device		
	Four-Wheel Drive-On		
	Four-Wheel Drive-Off		