

OPERATOR MANUAL

- **26 HST Tractor**

INTERNATIONAL TRACTORS LIMITED
HOSHIARPUR (INDIA)

Phone: +91-1882-302-525/526

E-mail: exports@sonalika.com

While taking delivery of Tractor, kindly ask the dealer to give following items*:

1. Tool kit* which includes

• Screw Driver	1 pc
• Cutter Plier	1 pc
• D-spanner 10X11	1 pc
• D-spanner 12X13	1 pc
• D-spanner 14X17	1 pc
• D-spanner 18X19	1 pc
• D-spanner 20X22	1 pc
• D-spanner 30X32	1 pc
• Ring spanner 24X27	1 pc
• Ring spanner 16X17	1 pc

2. Farmer kit* which includes

• Fuel Filter	1 pc
• Linch Pin	4 pc
• Hydraulic Oil Filter	3 pc
• Fuse Set	1 pc
• Hydraulic Oil Filter (Suction-Delivery)	3 pc
• Fan Belt	1 pc
• Lube Oil Filter	3 pc

3. Other Items

Battery Warranty Card (optional)	1 pc
Operator Manual	1 pc

4. To avail the services.

5. To call dealers any time for any breakdown.

* Items may vary model to model.

Dear Customer,

We welcome you with great pleasure for joining ITL family and thanks for faith and trust you have placed in the careful selection of your tractor.

We are sure that our dealer must have taken good care while delivering tractor upto your satisfaction.

Before using tractor, it is recommended to read this manual thoroughly. Any person who uses the tractor should be also advised to read these instructions.

Daily and routine maintenance operations can be easily performed with the use of this manual. To get best and trouble free performance from you tractor. Please ensure for periodic maintenance as per recommended schedule in the owner's manual at authorized dealership.

Use only genuine ITL spare parts from dealer/stockist for reliable and durable performance.

Information provided in this operator manual is accurate at the time of printing. Improvements and modifications are a continuous process at **International Tractors Limited (ITL)**, therefore ITL reserves the right for modification at any time without prior notice.

For any help/support feel free to call our dealership with the tractor details like Engine number and Chassis number.

We wish you prosperity and growth.

Export Department

INTERNATIONAL TRACTORS LIMITED

Vill.-Chak Gujran, P.O. Piplanwala 146022

Jalandhar Road, Hoshiarpur, Punjab, India.

Phone: +91-1882-302-525/526

E-mail: exports@sonalika.com

This publication has been written in compliance with International Standard ISO 3600 'Guide for information, contents and presentation of operation and maintenance manuals supplied with tractors and machinery for agricultural and forestry use'.

OWNERSHIP AND TRACTOR DETAILS

OWNER'S NAME & ADDRESS	_____
	_____ TEL.NO. _____

Model :	Delivery Date :
Chassis No. :	Bill No. / Date :
Engine No. :	Alternator Make / Sr. No. :
Battery Make / Sr. No. :	Starter Motor Make / Sr. No. :
FIP Sr. No. :	Hydraulic Pump Make / Sr. No. :

Tyre	Make	Size	Sr. No.
Front (Left)			
Front (Right)			
Rear (Left)			
Rear (Right)			

I have understood all the terms & conditions of the maintenance of the tractor, terms of warranty, systems, Scheduled services & understood operation of tractor in the field and other operations.

Received a new defect free tractor Chassis No.

Engine No. & fully satisfied with the transaction.

OWNER'S SIGNATURE	DEALER STAMP & SIGNATURE
	PH. NO. DATE:

*** IMPORTANT INFORMATION TO CUSTOMER:** For any assistance with regard to our product, please contact our authorized dealer or authorized service center.

--

CUSTOMER COPY



OWNERSHIP AND TRACTOR DETAILS

OWNER'S NAME & ADDRESS	_____
	_____TEL.NO. _____

Model :	Delivery Date :
Chassis No. :	Bill No. / Date :
Engine No. :	Alternator Make / Sr. No. :
Battery Make / Sr. No. :	Starter Motor Make / Sr. No. :
FIP Sr. No. :	Hydraulic Pump Make / Sr. No. :

Tyre	Make	Size	Sr. No.
Front (Left)			
Front (Right)			
Rear (Left)			
Rear (Right)			

I have understood all the terms & conditions of the maintenance of the tractor, terms of warranty, systems, Scheduled services & understood operation of tractor in the field and other operations.

Received a new defect free tractor Chassis No.

Engine No. & fully satisfied with the transaction.

OWNER'S SIGNATURE	DEALER STAMP & SIGNATURE
	PH. NO. DATE:

*** IMPORTANT INFORMATION TO CUSTOMER:** For any assistance with regard to our product, please contact our authorized dealer or authorized service center.

--

DEALER COPY

Index 10

Introduction 13

Warranty 16

Safety Notes 18

Instrument & Controls. 38

Operation 50

Maintenance Schedule 67

Technical Specifications. 83

Matching Implements 84

Do's & Don'ts 86

Troubleshooting 89

CHAPTER 1: INTRODUCTION & IDENTIFICATION

1.1 Using Operator Manual	13
1.2 Chassis Serial Number	14
1.3 Engine Serial Number	14
1.4 Statutory Plate.....	14
1.5 ROPS Certificate Plate.....	14
1.6 Universal Symbols	15

CHAPTER 2: WARRANTY & SAFETY

2.1 Introduction	16
2.2 Warranty, Pre-delivery and Installation	16
2.3 Warranty Procedure	17
2.4 Parts Warning	17
2.5 If You Move	17
2.6 Service After Warranty	17
2.7 Guidelines about Safety Sign.....	18
2.8 Safety: Prepare For Safe Operation	19
Safety Notes	18-37
Safety While Operating Loader Attachments	33
Safety From Lightning Strike.....	34
Noise & Vibration Levels	34

CHAPTER 3: INSTRUMENTS & CONTROLS

3.1 Tractor Controls	38
3.2. Instrument Panel	39
3.2.1 Park Brake Indicator.....	40
3.2.2 Battery Charge Indicator	40
3.2.3 Air Cleaner Clogging Indicator	40
3.2.4 Left Turn Indicator	40
3.2.5 Engine RPM cum Hour Meter	41
3.2.6 Right Turn Indicator.....	41
3.2.7 High Beam Indicator	41
3.2.8 Cold Start Indication.....	41
3.2.9 Oil Pressure Indicator.....	42
3.2.10 PTO Monitor Lamp	42
3.2.11 Turn Trailer Lamp	42
3.2.12 Temperature Gauge	42
3.2.13 Fuel Gauge	43
3.2.14 Work Lamp Indicator	43
3.2.15 Cruise Control Indicator	43
3.3 Dashboard Controls	44
3.4 Fuse Box.....	46
3.5 Battery.....	47
3.6 Seven Pin Socket.....	47
3.7 Tractor Lights	48
3.8 Registration Plate.....	48
3.9 Driver's Seat	49

CHAPTER 4: OPERATION

4.1 Operator Presence Control (OPC).....	50
4.1.1 Parking Brake OPC.....	50
4.1.2 Power take-off OPC.....	50
4.2 Boarding & Leaving the Tractor.....	51
4.3 Engine.....	51
4.3.1 Starting the Engine.....	51
4.3.2 Cold Weather Starting.....	51
4.3.3 Running in.....	52
4.3.4 Turning off the Engine.....	52
4.3.5 Stopping and Parking.....	52
4.4 Under Hood Muffler.....	53
4.5 Opening the Bonnet.....	53
4.6 Speed Control Pedals.....	53
4.7 Engaging and Dis-engaging Cruise Operation.....	54
4.8 '2WD / 4WD' Lever.....	54
4.9 Hand Throttle Lever.....	55
4.10 Power Take off (PTO).....	55
4.11 Hydraulic Coupling Devices.....	58
4.12 Response Valve.....	59
4.13 Hi-Low Lever.....	59
4.14 Differential Lock Pedal.....	60
4.15 Power Steering.....	60
4.16 Service Brake.....	60
4.17 Parking Brake.....	61
4.18 Speed Chart.....	61
4.19 Wheels and Tyres.....	62
4.20 Check Wheel Nut Bolt.....	63
4.21 Ballasting the Front Axle.....	64
4.22 Hydraulic Control Lever.....	64
4.23 Three Point Linkage.....	64
4.24 Safety Frame: Roll Over Protection Structure (ROPS).....	66

CHAPTER 5: MAINTENANCE

5.1 Maintenance Schedule.....	67
5.2.1 Fuel Tank Filling.....	69
5.2.2 Fuel Requisites.....	69
5.2.3 Fueling.....	69
5.2.4 Fuel Storage.....	69
5.3.1 Checking Engine Oil Level.....	70
5.3.2 Replacement of Oil Filter & Engine Oil.....	70
5.4 Replacement of Fuel Filter.....	71
5.5 Air Bleeding of Fuel System.....	71
5.6 Radiator.....	71
5.6.1 Coolant Level in Radiator (When Hot).....	71
5.6.2 Radiator Draining & Flushing (When cold).....	72
5.6.3 Radiator Fins Cleaning.....	72
5.6.4 Radiator Mesh Cleaning.....	72
5.6.5 Radiator Cap.....	72

5.7 Inspection of Hoses	73
5.8 Air Cleaner Maintenance	73
5.9 Brake Pedal.....	74
5.10 Brake Pedal Free Play	74
5.11 Steering Cylinder Knuckle Joints.....	74
5.12 Check Oil Level in Front Axle (4WD).....	74
5.13 Oil Changes for Transmission, Rear Final Drives and Power Lift Hydraulic Circuits	75
5.14 Recommended Oil grades & Application range	75
5.15. Hydraulic Filter Replacement	76
5.16 Cleaning of Suction Strainer	76
5.17 General Maintenance of Electrical System	77
5.18 Battery and its Maintenance	77
5.19 Starter Motor	78
5.20 Alternator.....	78
5.21 Fuses in Fuse Box	79
5.22 Long Idle Period.....	80
5.23 Greasing Points.....	81
5.24 Jack Up the Tractor - Lifting Points	82
5.25 Oil and Lubrication Chart	82
 CHAPTER 6: TECHNICAL SPECIFICATIONS	
6.1 Technical Specifications	83
6.2 Matching Implements	84
 CHAPTER 7: DO'S AND DON'TS.....	86
 CHAPTER 8: TROUBLESHOOTING, SERVICE RECORD & ALPHABETICAL INDEX	
Troubleshooting	89
Service Record.....	91
Alphabetical Index.....	92

1. Using this Operator Manual

This manual is an important part of your tractor and it should be kept with the tractor even when you sell it.

Reading this manual will help you and others avoid personal injury or damage to the tractor. Information provided in this manual will help you to use the tractor in safest and effective way.


If you have an attachment, use the safety and operating information in the attachment operator's manual along with the tractor operator's manual to operate the attachment safely and correctly.

This manual and safety signs on your tractor may also be available in various languages (contact your dealer for more information).

The tractor shown in this manual may differ slightly from your tractor, but will be similar enough to help you understand our instructions.

Throughout this manual, the use of terms Left Side, Right Side, Front Side and Rear Side must be understood, to avoid any confusion when following these instructions. The Left and Right means left and right sides of the Tractor when facing in the direction of forward travel, reference to the Front indicates the radiator end of the Tractor, while the Rear, indicates the draw bar end.

Always specify the tractor Chassis and Engine serial numbers when you need replacement parts. This will facilitate correct & faster delivery of required parts from the dealer. For easy reference, we suggest you to record these numbers in the space provided in the 'Ownership and Tractor details' page before this Chapter.

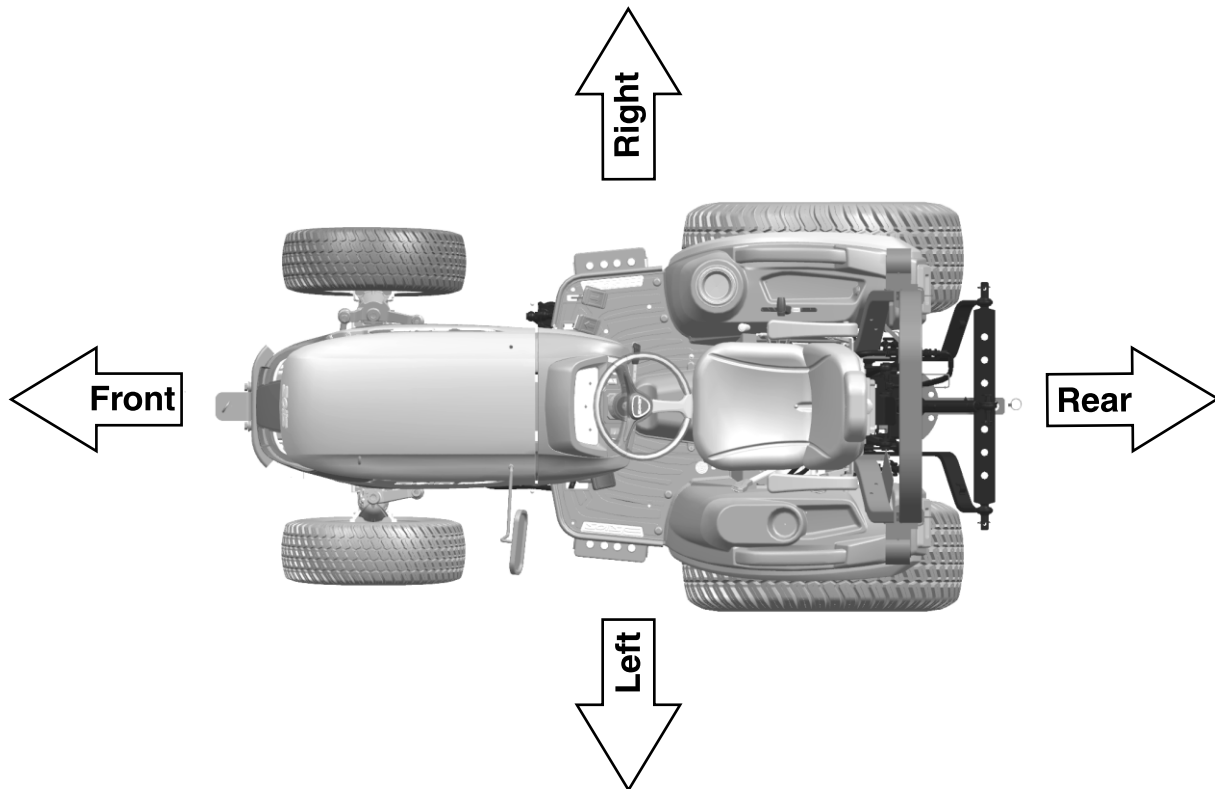


1.2 Chassis Serial Number (A): Chassis number is punched on right side of front axle bracket of the tractor (See Fig. A). Should you find the number difficult to read, you will also find it on the Statutory plate.

1.3 Engine Serial Number (B): The engine serial number is stamped on the upper side of the Fuel Injection Pump installation part located in the right side of cylinder block. For easy reference, engine serial number is also mentioned on valve cover of the engine (see Fig. B).

1.4 Statutory Plate (C): Chassis number is also engraved on Statutory plate. Statutory plate is located on left hand side fender (Fig. C1 & C2).

1.5 ROPS Certificate Plate (D) - Optional: ROPS certificate plate is riveted on ROPS. Information about ROPS serial number and tractor model is engraved on ROPS plate. For countries under EEC, ROPS Certificate plate is used as shown in Fig. D.

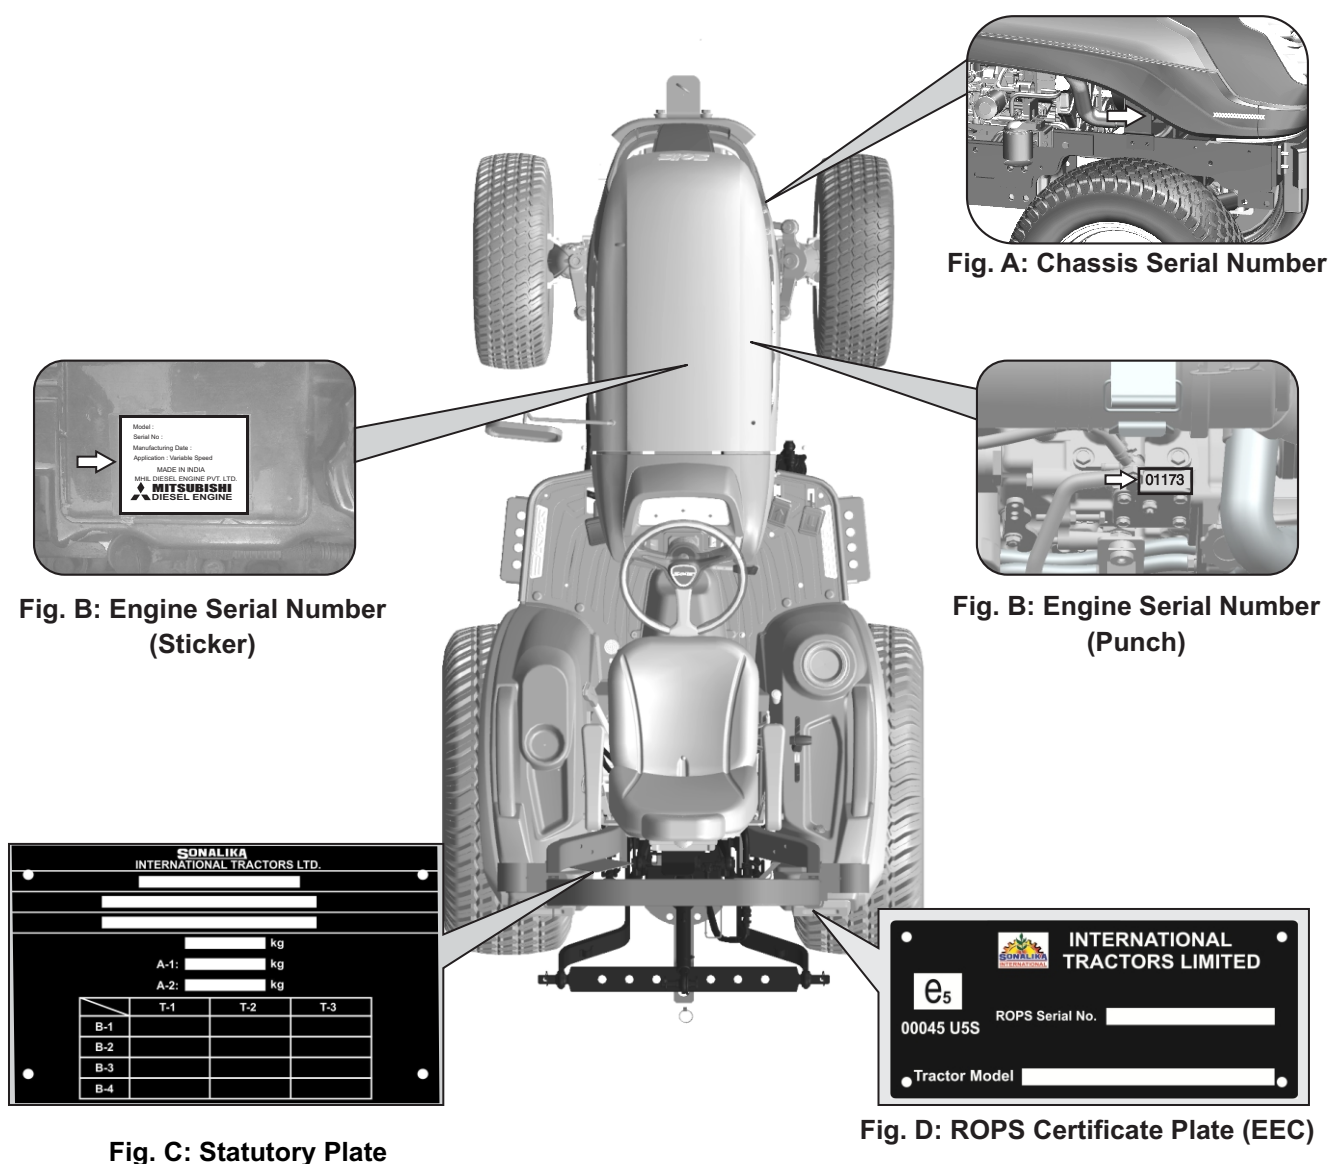

1.7 Universal Symbols

As a guide to the operation of your tractor, various universal symbols have been utilized on the instruments, controls and other places on tractor. The symbols are shown below with an indication of their meaning.

	Read Operator's Manual		Fast
	Safety Alert Symbol		Slow
	Fuel Level		Engine Coolant-Temperature
	Engine Rotational Speed		PTO 540
	Parking Brake		PTO 540 Economy
	Air Cleaner Clogging Sensor		Differential Lock
	Battery Charging Condition		Hydraulic Control-Lowered Position
	Engine Oil-Pressure		Hydraulic Control-Raised Position
	Turn Signal		Engine Speed Control
	Power Take-Off Clutch Control-Off Position		Remote Cylinder-Retract
	Power Take-Off Clutch Control-On Position		Remote Cylinder-Extend
	Hazard Warning Lights		Engine Stop
	Master Lighting Switch		
	Parking Brake Indication		
	Headlight-Low Beam		
	Headlight-High Beam		
	Audible Warning Device		
	Four-Wheel Drive-On		
	Four-Wheel Drive-Off		