

**NOTE:** WARRANTY WILL BE REIMBURSED AS PER THE WARRANTY POLICY, KINDLY CONTACT NEARBY DEALER/DISTRIBUTOR.



**NOTE:** E-marked indicated component are applicable for countries under European Economic Community (EEC) compliance.

## 2.1 Introduction

**NOTE:** This book is published for worldwide distribution, and availability of equipment shown either as basic or accessory may vary according to the territory in which the tractor is to be operated. Full details of equipment available in your area can be obtained from your Dealer.

The purpose of this book is to enable the owner and driver to operate the tractor in a safe manner. Providing that the instructions are followed carefully, the tractor will give years of service in our tradition.

The installation of the product by the Dealer gives the opportunity to ensure that the operating and maintenance instructions are understood. Always consult your Dealer if do not understand any part of this book. It is important that these instructions are understood and observed. Daily maintenance should become a routine, and a record of hours in service should be kept.

When new parts are required it is important that only genuine service parts are used. Our Authorized Dealers supply genuine parts and can give advice regarding their fitment and use. Extensive damage may occur as a result of the fitment of parts of inferior quality, Customers are advised to buy their service parts only from an authorized Dealer. Owing to wide variations in operating conditions, it is impossible for the Company to make comprehensive or definitive statements in its publications regarding performance or methods of use of its machines, or to accept liability for any loss or damage which may result from these statements, or from any errors or omissions. If the tractor is to be used for abnormal conditions which may be detrimental (e.g. deep water or paddy fields) consult your Dealer for special instructions, or the warranty may be invalidated.

These tractors are designed solely for use in customary agricultural operations (intended use).

Use in any other way is considered as contrary to the intended use. The tractor manufacturer accepts no liability for any damage or injury resulting from misuse and these

risks must be borne solely by the user. Compliance with, and strict adherence to, the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

These tractors should be operated, serviced and repaired only by persons familiar with all their particular characteristics and who are acquainted with the relevant safety rules (accident prevention).

Customers are strongly advised to use an official authorized Dealer in connection with any service problems and adjustment that may occur.

## 2.2 Warranty, Pre-delivery and Installation

The Company, when selling new goods to their Dealers, gives a warranty which, subject to certain conditions, guarantees that the goods are free from defects in material and workmanship. Since this book is published for worldwide circulation, it is impossible to detail the exact terms and conditions of warranty that apply to a retail customer in any particular country. Purchasers of new equipment should request full details from their supplying Dealer.

In accordance with the Company policy of continuous improvement to its machines, alterations in the specifications of machines may be made at any time without notice. The Company accepts no responsibility for discrepancies which may occur between the specifications of its machines and the descriptions thereof contained in its publications. A dealer is required to carry out certain activities when supplying a new tractor. These consist of a full pre-delivery inspection to ensure that the tractor supplied is ready for immediate use, and full instruction in the basic principles of operation and maintenance of the tractor. These instructions will cover instruments and controls, routine maintenance and safety precautions. All persons who will be concerned with the operation and maintenance of the machine should be present for these instructions.

**NOTE: The tractor manufacturer will not accept responsibility for any claim resulting from the fitment of non-approved parts or attachments, or unauthorized modification or alteration.**

### 2.3 Warranty Procedure

Correct installation, coupled with regular maintenance, will do much to prevent breakdowns. If, however, operating trouble is experienced during the warranty period, the following procedure must be adopted:-

Immediately notify the Dealer from whom you purchased the tractor, quoting the Model and Serial Number. It is most important that there should be no delay, and you should realize that, even where the original failure is covered by warranty, if the failure is not repaired immediately, warranty cover may not apply.

Provide your Dealer with as much background information as you can. It will help him to know how many hours service has been achieved, the type of work on which you are engaged and the symptoms of the trouble.

It should be noted that normal maintenance services such as tuning, brake adjustments, and the supply of materials used to service the tractor (oil, filters, fuel and antifreeze) are not covered by terms of the warranty.

### 2.4 Parts Warning

The fitment of non genuine parts may result in a part of substandard quality being used. The tractor manufacturer will not take the responsibility for any loss, damage or liability resulting from the fitment of such parts, and, if fitted during the normal warranty period the manufacturer's guarantee may be invalidated.

### 2.5 If You Move

Only the official dealer from whom you purchase the tractor is responsible for the protection afforded by your warranty and, where possible, you should always take the tractor to him for repair. If, however, you move to another area or if your tractor should be working temporarily at some distance from the Dealer from whom it was purchased, you are recommended to obtain from the

original Dealer the name and address of the Dealer nearest to your new location and to ask for arrangements to be made for outstanding service warranty commitments to be transferred to the latter. If you have left the area in which the original Dealer operates and have not made arrangements with your new Dealer, the latter will readily provide assistance in emergency but you will be charged at normal rates for any work undertaken unless:

- a. You make it clear that the warranty has not expired and
- b. You give the repairing Dealer the opportunity to make suitable arrangements with the retailing Dealer.

### 2.6 Service After Warranty

During the warranty period, you should have all your repairs and maintenance performed by your dealer. This ensures that a detailed check is kept on the progress and performance of your new tractor.

In order to obtain the best results from your tractor it is important that regular maintenance and service checks continue after the warranty period has expired. Make use of your local Dealer for all major tractor services; a trained engineer will spot any problems between the service and the next.

The mechanics are regularly trained and updated on the product, servicing techniques and the use of modern service tools and diagnostic equipment. They receive regular Service Bulletins; have all Workshop Manuals and other such technical information to ensure that the repair or service is to the standard required.

This safety alert symbol means **ATTENTION!**  
**BECOME ALERT! YOUR SAFETY IS INVOLVED !**



The safety alert symbol identifies important safety messages on machines, safety signs, in manuals or elsewhere. When you see this symbol, be alert to the possibility of personal injury or death.

Why is **SAFETY** important to you? **\*ACCIDENT DISABLE and KILL\***

**\* ACCIDENTS are COSTLY \*\* ACCIDENTS can be AVOIDED\***

## 2.7 Guidelines About Safety Sign

### Recognize Safety Information:

Any of the following symbols on your machine or in this manual, alert you to the potential for personal injury. Follow recommended precautions and safe operating practices.



**DANGER**

The symbol and the word DANGER indicate an immediate hazardous situation, which if not avoided, will result in DEATH OR VERY SERIOUS INJURY.



**WARNING**

The symbol and the word WARNING indicate a potentially hazardous situation. If the instructions or procedures are not correctly followed it could result in DEATH OR VERY SERIOUS INJURY.



**CAUTION**

The symbol and the word CAUTION indicate a potentially hazardous situation, which if not avoided, may result in MINOR INJURY.

**IMPORTANT :** Indicates that equipment or property damage could result if instructions are not followed.

**NOTE :** Indicates important information or information which is useful for tractor operation.

## 2.8 Safety: Prepare For Safe Operation

### Protect yourself:

Wear all the protective clothing and personal safety devices issued to you or called for by job conditions. Don't take risk hence you may carry/wear the following (Fig. 2.1)

- (a) A hard hat.
- (b) Safety glasses, goggles or face shield.
- (c) Hearing protection.
- (d) Respirator or filter mask.
- (e) Inclement weather clothing.
- (f) Reflective clothing.
- (g) Heavy gloves (neoprene for chemical, leather for rough work).
- (h) Safety shoes.

DO NOT wear loose clothing, jewellery or other items and tie up long hair which could catch on controls or other parts of the tractor.

Learn where fire extinguishers and first aid or emergency equipment is kept and where to get help in a hurry. Make sure you know how to use this equipment.



(a)



(b)



(c)



(d)



(e)



(f)



(g)



(h)



## SAFE OPERATION

Careful operation is your best insurance against accident.

Read and understand this manual carefully before operating the tractor.

All operators no matter how much experience they may have, should read this and other related manuals before operating the tractor or any implement attached to it.

 
It is the owner's obligation to instruct all operators a safe operation.

### BEFORE OPERATING THE TRACTOR

#### READ SAFETY INSTRUCTION

Carefully read all safety instructions given in this manual for your safety. Tempering with any of the safety devices can cause serious injuries or death. Keep all safety signs in good condition. Replace missing or damaged safety signs.

Keep your tractor in proper condition and do not allow any unauthorized modifications to be carried out on the Tractor, which may impair the function/safety and affect Tractor life.

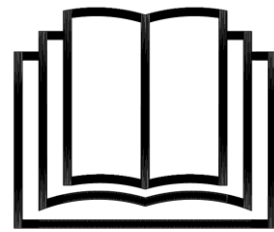

Strictly follow the instructions outlined in the operator's manual of the mounted or trailed machinery or trailer, and not to operate the combination tractor — machine or tractor — trailer unless all instructions have been followed.

### DRIVING THE TRACTOR

1. Watch where you are going especially at row ends, on roads, around trees and low hanging obstacles.
2. To avoid upsets, drive the tractor with care and at speeds compatible with safety, especially when operating over rough ground, crossing ditches or slopes, and when turning at corners.
3. Lock the tractor brake pedals together when transporting on roads to provide proper wheel braking.
4. Keep the tractor in the same gear when going downhill as used when going uphill. Do not coast or free wheel down hills.
5. Any towed vehicle and/or trailer whose total weight exceeds that of the towing tractor, must be equipped with its own brakes for safe operation.
6. When the tractor is stuck or tyres are frozen to the ground, back out to prevent upset.
7. Always check overhead clearance, especially when transporting the tractor.

### STARTING THE TRACTOR

#### Warn bystanders before starting:

Before starting, Walk all around the tractor and any attached equipment. Make sure that no one is under it, on it, or close to it. Let other workers and bystanders know you are starting up and don't start until everyone is clear of the tractor, implements and towed equipment.

Ensure that all bystanders, particularly children are in a safe position before starting the engine.

#### Mount and dismount properly:

Always use 'three point contact' with the machine, and face the machine when you mount it. Three point contact means both hands and one foot or one hand and both feet are in contact with the machine at all times during mounting and dismounting.

Clean the soles of your shoes and wipe your hands before climbing on. Use handrails, grip handrails, ladders or steps (as provided) when mounting or dismounting.

NEVER use control levers as a hand hold and NEVER step on foot controls when mounting or dismounting.

NEVER attempt to mount or dismount from a moving tractor. NEVER jump off a tractor in any circumstances.

Adjust the seat, fasten the seat belt (where applicable as outlined in this manual), apply the parking brake and put all controls in neutral before starting up.



Before starting the engine, make sure there is plenty of ventilation. Never operate the engine in a closed building. The exhaust fumes may cause asphyxiation.



### KEEP RIDERS OFF TRACTOR

Do not allow riders on the Tractor.

Riders on Tractor are subject to injury such as being stuck by foreign objects and being thrown off the Tractor.



 
### PRECAUTION TO AVOID TIPPING

Do not drive where the Tractor could slip or tip.

Stay alert for holes and rocks in the terrain, and other hidden hazards.

Slow down before you make a sharp turn.

Driving forward out of a ditch or mired condition could cause Tractor to tip over backward. Back out these situations if possible.

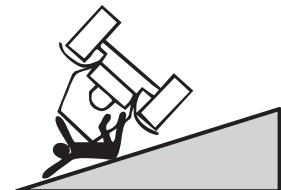

### PROHIBITED USE OF TRACTOR DURING OVERTURNING

 
#### Risk of Overturning:

For your safety, tractor is fitted with safety frame and seat belts.

In the event of overturning with a tractor fitted with a safety frame, hold the steering wheel firmly and DO NOT attempt to leave the seat until the tractor has come to rest.

#### To avoid side overturns:

- Reduce speed to match operating conditions. If the tractor is equipped with a front end loader, carry the bucket and load as low as possible.
- Make wide slow turns on reduced speed. DON'T let you tractor bounce. You may loose steering control.
- DON'T pull a load too heavy for your tractor. It could run away on the down slope the tractor could jack knife around a towed load.
- DON'T brake suddenly. Apply brakes smoothly and gradually.
- When going down a slope use the throttle to slow the tractor engine.

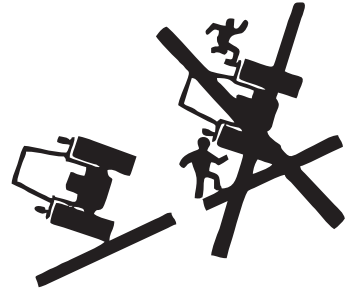


### PARK TRACTOR SAFELY

Before working on the Tractor:

Lower all equipments to the ground.

 Stop the engine and remove the ignition key.

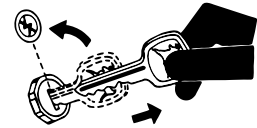

### SAFETY STARTER SWITCH

1. Brake operated Safety switch is provided which allows the starting system to become operational only when the Brake pedal is fully pressed.
2. Do not By-pass this Safety switch or work on it. Only Authorized Dealers are recommended to work on Safety starter switch.

**AVOID HOT EXHAUST**

Servicing machine or attachment with engine running can result in serious personal injury. Avoid exposure.

Exhaust parts and streams become very hot during operation. Exhaust gases and components reach temperatures hot enough to burn people, ignite, or melt common materials.

**AVOID HIGH-PRESSURE FLUIDS**

Escaping fluid under pressure can penetrate the skin causing serious injury. Keep hands and body away from pinholes and nozzles, which eject fluids under high pressure. If any fluid is injected into the skin, consult your doctor immediately.

**PREVENT BATTERY EXPLOSIONS**

Keep sparks, lighted matches, and open flame away from the top of battery.

Battery gas can explode.

 
Never check battery charge by placing a metal object across the poles.

**ALWAYS USE SAFETY LIGHTS**

Use of hazard warning lights and turn signals are recommended when towing equipment on public roads unless prohibited by state or local regulations.

**ROAD REGULATIONS**

- When operating your tractor on a public road a number of precautions must be taken.
- Know the route you are going to travel.
- Use caution when towing a load at transport speeds especially if the towed equipment is NOT equipped with brakes.
- Observe all local or national regulations regarding the road speed of your tractor.
- Use extreme caution when transporting on snow-covered or slippery roads.
- Wait for traffic to clear before entering a public road. Beware of blind intersections. Slow down until you have a clear view.

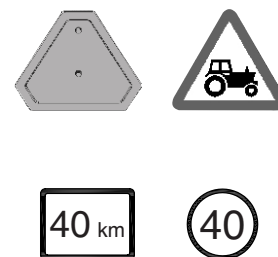




**PREVENT ACID BURNS**

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, cause holes in clothing and cause blindness. For adequate safety always:

1. Fill batteries in a well-ventilated area.
2. Wear eye protection and acid proof hand gloves.
3. Avoid breathing direct fumes when electrolyte is added.
4. Do not add water to electrolyte as it may splash off causing severe burns.

 If you spill acid on yourself, immediately flush your skin with water and flush your eyes for 10-15 minutes. Get medical attention immediately.

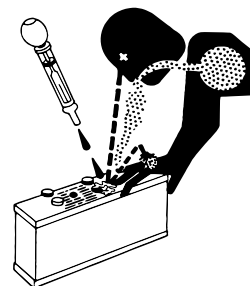**HANDLE FUEL SAFELY-AVOID FIRES**

Handle fuel with care; it is highly flammable. Do not refuel the Tractor while smoking or near open flame or sparks.

Always stop engine before refueling.

Always keep your tractor clean of accumulated grease and debris.

Always clean up spilled fuel.

**SERVICE TRACTOR SAFELY**

Do not wear a necktie, scarf or loose clothing when you work near moving parts. If these items get caught, severe injury could result.

Remove rings and other jewellery to prevent electrical shorts and entanglement in moving parts.

**STAY CLEAR OF ROTATING SHAFTS**

 
Entanglement in rotating shaft can cause serious injury or death.

Keep PTO shield in place at all times.

Wear close fitting clothing. Stop the engine and to sure PTO drive is stopped before making adjustments, connections, or cleaning out PTO driven equipment.

**GENERAL OPERATING HAZARDS**

- Three point hitch and side mounted implements make a much larger arc when turning that towed equipment. Make certain to maintain sufficient clearance for safe turning.
- When using attachments or implements with the tractor, be sure to thoroughly read the Operator Instruction Book for that attachment or implement and follow its safety instructions.
- Pull only from the approved drawbar. Towing or attaching to other locations may cause the tractor to overturn.
- Improper use of the drawbar, even if correctly positioned, may cause the tractor to overturn to the back.
- DO NOT overload an attachment or towed equipment. Use proper counterweights to maintain tractor stability. Hitch loads to the drawbar only.

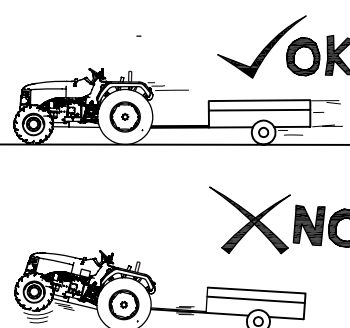


**PRACTICE SAFE MAINTENANCE**

- Understand service procedure before doing work.
- Keep the surrounding area of the Tractor clean and dry.
- Do not attempt to service Tractor when it is motion.
- Keep body and clothing away from rotating shafts.
- Always lower equipment to the ground. Stop the engine.
- Remove the key equipment to the ground. Stop the engine.
- Securely support any Tractor elements that must be raised for service work.
- Keep all parts in good condition and properly installed.
- Replace worn or broken parts. Replace damage/missing decals.
- Remove any buildup of grease or oil from the Tractor.
- Disconnect battery ground cable (–) before making adjustments on electrical system or welding on Tractor.

**SAFETY TIPS DURING MAINTENANCE**

 1. At least on a daily check all oil levels. Water level in the radiator and electrolyte level in the battery and perform services according to the service schedule.
2. Ensure tyre pressure are even and the correct pressure for the job being done is maintained.
3. Check to ensure that the all controls and preventive mechanisms of the Tractor and implement work correctly and effectively.
4. Ensure that an adequate set of the correct tools is available for maintenance and minor repairs.
5. Ensure that all service work and repairs are carried out on a flat area with a concrete or similar floor.  
Do not carry out service work on tractor until it is switched off, and the parking brake applied and wheels chocked. Where a tractor is stored in a confined area, ensure that the area is well ventilated as exhaust gases are very harmful, and can cause death.
6. Do not work under lifted implements/Implements under operation.
7. When changing wheels or tyres ensure that a suitable wheel stand is placed under the axle prior to removing the wheel and the wheels are chocked.
8. Where guards or shields need to be removed to perform a service or repair, ensure that the guard or shield is correctly reinstalled before starting the Tractor.
9. Never refuel near a naked flame or with an overheated engine. Ensure to turn off Engine before refueling.
10. The cooling system operates under pressure, take care when removing the Radiator cap a hot engine to prevent being scalded by steam or hot water. Do not add water in the radiator when then engine is hot. Add water to the radiator only after the engine coals down completely.
11. To prevent fire keep the tractor including the engine clean and free from inflammable material and well away from fuels and other inflammable material.

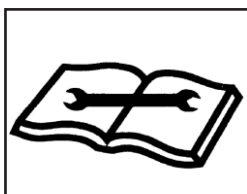


**Consult technical manual for proper service procedures**

**PREPARE FOR EMERGENCIES**

Be prepared if a fire starts.


Keep a first aid kit and fire extinguisher ready.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near telephone or mobile phone.

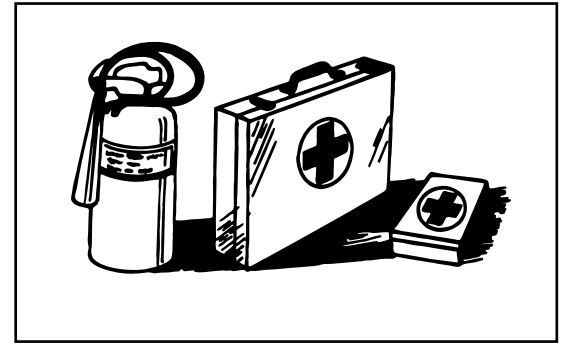**PROTECT AGAINST NOISE**

Prolonged exposure to loud noise can cause impairment or loss of hearing.

 Wear a suitable protective device such as earmuffs or earplugs to protect against uncomfortable loud noises.

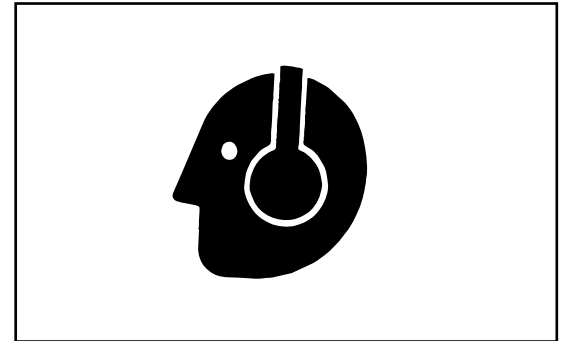
**SAFE HANDLING OF STARTING FLUID**

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

 
Do not puncture a starting fluid container.

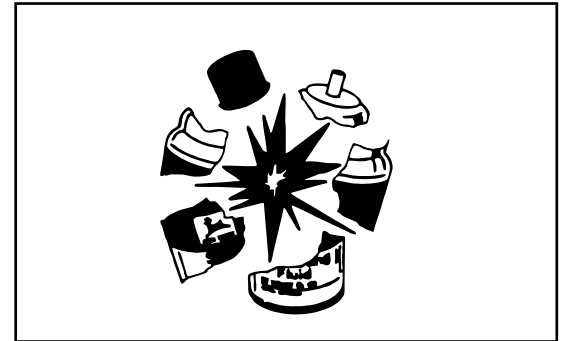**KEEP ROPS INSTALLED PROPERLY**

Make sure that all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

 The seat is part of the ROPS safety zone. Replace only with seat approved for your tractor. Any alteration of the ROPS must be approved by the manufacturer.

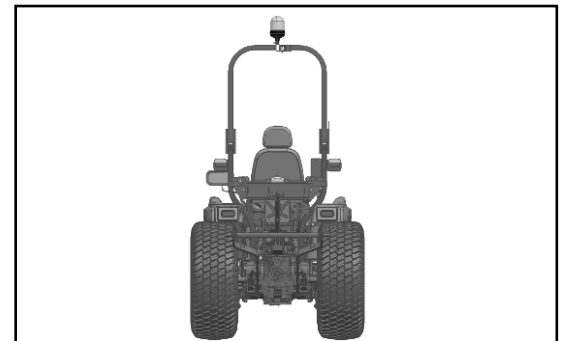


### AVOID STATIC ELECTRICITY RISK WHEN REFUELING

The removal of sulfur and other compounds in Ultra-Low Sulfur Diesel (ULSD) fuel decreases its conductivity and increases its ability to store a static charge.

Refineries may have treated the fuel with a static dissipating additive. However, there are many factors that can reduce the effectiveness of the additive over time.

Static charges can build up in ULSD fuel while it is flowing through fuel delivery systems. Static electricity discharge when combustible vapors are present could result in a fire or explosion.

 Therefore, it is important to ensure that the entire system used to refuel your machine (fuel supply tank, transfer pump, transfer hose, nozzle, and others) is properly grounded and bonded. Consult with your fuel or fuel system supplier to ensure that the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

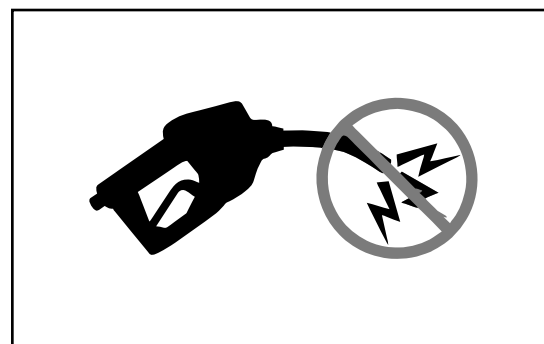

### PREVENTION OF FIRE

Tractor should be regularly inspected and cleaned to lower the risk of fire.

During normal operation of tractor, crop material, hay or other debris can be accumulated. This is likely to happen when operating in dry conditions. Any such build up must be removed to ensure proper machine function and to reduce the risk of fire. The tractor must be inspected and cleaned periodically throughout the day.

Birds and other animals may build nests or bring other flammable materials into the engine compartment or onto the exhaust system. The tractor should be inspected and cleaned prior to the first use each day.

Regular and thorough cleaning of the tractor combined with other routine maintenance procedures listed in this Operator Manual reduce the risk of fire and the chance of costly downtime.

Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.

Check fuel lines, tank, cap, and fittings frequently for damage, cracks or leaks. Replace, if necessary.

Follow all operational and safety procedures mentioned on the tractor and the Operator Manual. Be careful of hot engine and exhaust components during inspection and cleaning. Before carrying out any inspection or cleaning, always shut OFF the engine, place the transmission in PARK or set parking brake, and remove the key. Removal of the key will prevent others from starting the tractor during inspection and cleaning.

**IN CASE OF FIRE**

**CAUTION: Avoid personal injury.**

Immediately stop the tractor at the first sign of fire. Fire may be identified by the smell of smoke or sight of flames. As fire grows and spreads rapidly, get off the tractor immediately and move safely away from the fire. Do not return to the tractor! The number one priority is safety.

Call the fire department. A portable fire extinguisher can put out a small fire or contain it until the fire department arrives; but portable extinguishers have limitations. Always put the safety of the operator and bystanders first. If attempting to extinguish a fire, keep your back to the wind with an unobstructed escape path so you can move away quickly if the fire cannot be extinguished.

Read the instructions on fire extinguisher and become familiar with their location, parts, and operation before a fire starts. Local fire departments or fire equipment distributors may offer fire extinguisher training and recommendations.

 
If your extinguisher does not have instructions, follow these general guidelines:

Pull the pin. Hold the extinguisher with the nozzle pointing away from you, and release the locking mechanism.

Aim low. Point the extinguisher at the base of the fire.

Squeeze the lever slowly and evenly.

Sweep the nozzle from side-to-side.

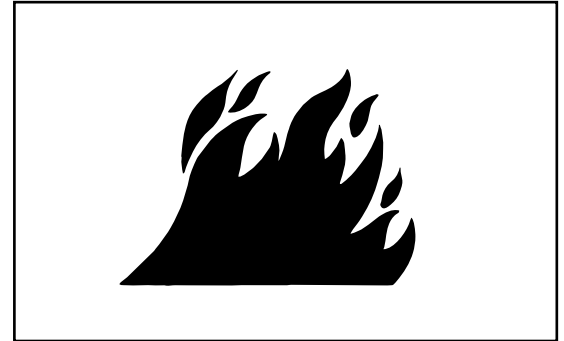**PROPER USE OF SEAT BELT & ROPS**

Avoid crushing injury or death during rollover.

Keep the ROPS in the fully extended and locked position.

USE a seat belt when you operate with a ROPS in the fully extended position.

Hold the latch and pull the seat belt across the body.

 
Insert the latch into the buckle. Listen for a click.

Tug on the seat belt to make sure that the belt is securely fastened.

Snug the seat belt across the hips.

If this machine is operated with the ROPS folded (for example, to enter a low building), drive with extreme caution. DO NOT USE a seat belt with the ROPS folded.


Return the ROPS to the raised, fully extended position as soon as the machine is operated under normal conditions.

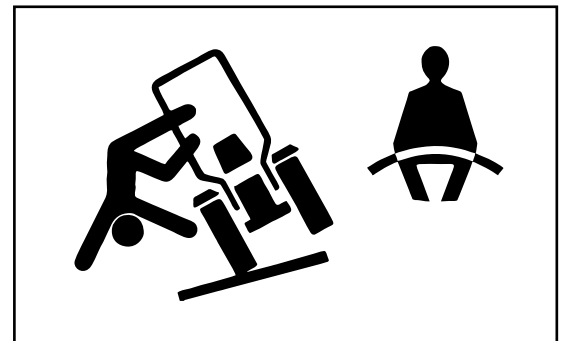

**NOTE:** 1). Replace entire seat belt if mounting hardware, buckle, belt, or retractor show signs of damage.  
2). Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage, such as cuts, fraying, extreme or unusual wear, discoloration, or abrasion. Replace only with genuine parts.

### CORRECT USE OF HANDHOLDS AND STEPS

 While getting On and Off the tractor, always face the tractor. Maintain 3 point contact with steps, handholds, handrails. Use extra care in slippery conditions due to mud, snow, or moisture. Keep steps clean and free of grease or oil. Never jump while de-boarding the tractor. Never mount or dismount a moving tractor.

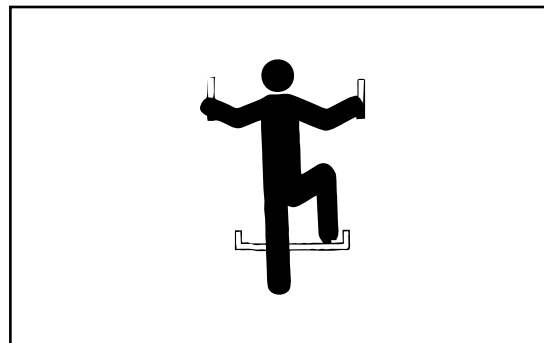

### LIMITED USE IN FORESTRY OPERATION

 
The intended use of tractors when used in forestry operations is limited to tractor-specific applications like transport, stationary work such as log splitting, propulsion, or operating implements with PTO, hydraulic, or electrical systems.

These are applications where normal operation does not present a risk of falling or penetrating objects. Any forestry applications beyond these applications, such as forwarding and loading, requires fitment of application-specific components including Falling Object Protective Structure (FOPS) and/or Operative Protective Structures (OPS).

### USE SAFETY LIGHT AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost.

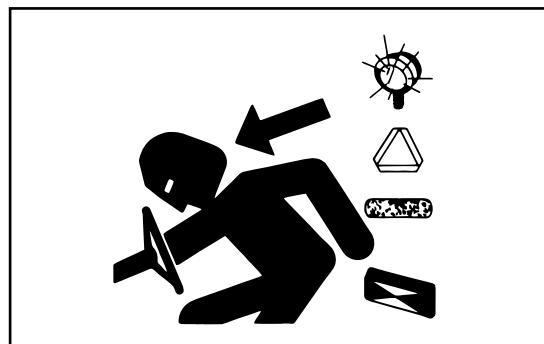


### USE OF SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separated from the drawbar. Use a chain with a strength rating equal to or greater than the gross weight of the towed machine.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

 Do not use safety chain for towing.

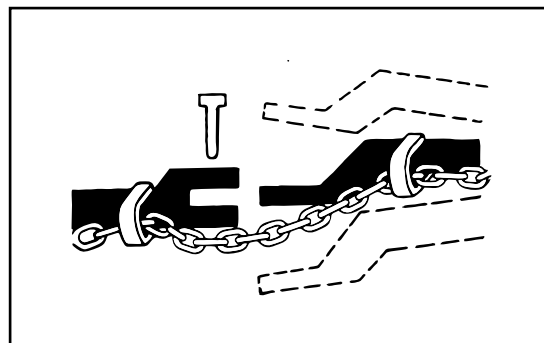


**FREEING A MIRED TRACTOR**

Attempting to free a mired tractor can involve safety hazards such as the mired tractor tipping rearward, the towing tractor overturning, and the tow chain or tow bar (a cable is not recommended) failing and recoiling from its stretched condition.

Back your tractor out if it gets mired down in mud. Unhitch any towed implements. Dig mud from behind the rear wheels. Place boards behind the wheels to provide a solid base and try to back out slowly. If necessary, dig mud from the front of all wheels and drive slowly ahead.


If necessary to tow with another unit, use a tow bar or a long chain (a cable is not recommended). Inspect the chain for flaws. Make sure all parts of towing devices are of adequate size and strong enough to handle the load.

 Always hitch to the drawbar of the towing unit. Before moving, clear the area of people. Apply power smoothly to take up the slack: a sudden pull could snap any towing device causing it to whip or recoil dangerously.

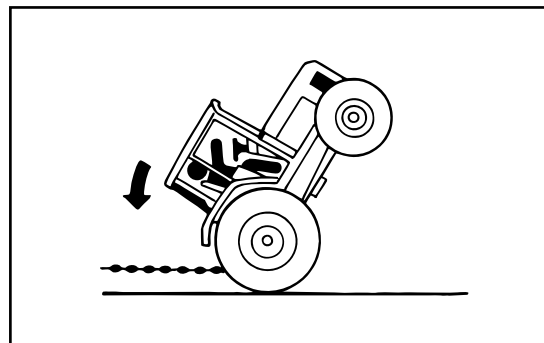
**AVOID CONTACT WITH AGRICULTURAL CHEMICALS**

If pesticide use instructions require respiratory protection, wear an appropriate respirator.

 Store the respirator in a closed box or some other type of sealable container, such as a plastic bag.

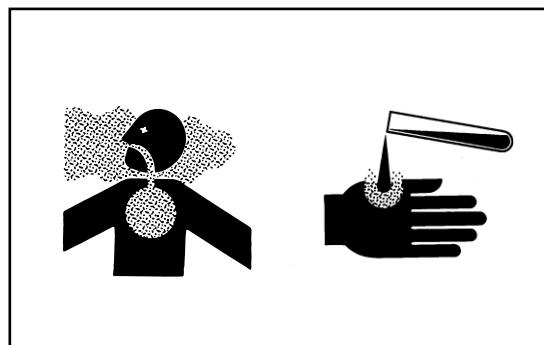**AVOID HEATING NEAR PRESSURIZED FLUID LINES**

 Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can accidentally burst when heat goes beyond the immediate flame area.

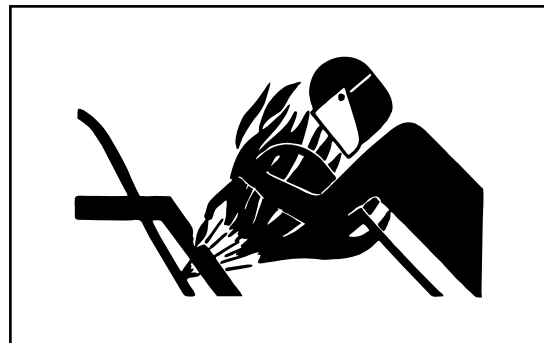


**HANDLE ELECTRONIC COMPONENTS AND BRACKETS SAFELY**

Falling while installing or removing electronic components mounted on equipment can cause serious injury. Use a ladder or platform to easily reach each mounting location. Use sturdy and secure footholds and handholds. Do not install or remove components in wet or icy conditions.

**SUPPORT MACHINE PROPERLY**


Always lower the attachment or implement to the ground before you work on the machine. If the work requires that the attachment be lifted, provide secure support for them. If left in a raised position, hydraulic supported devices can settle or leak down.

 Do not work under the tractor which is supported solely by a jack.

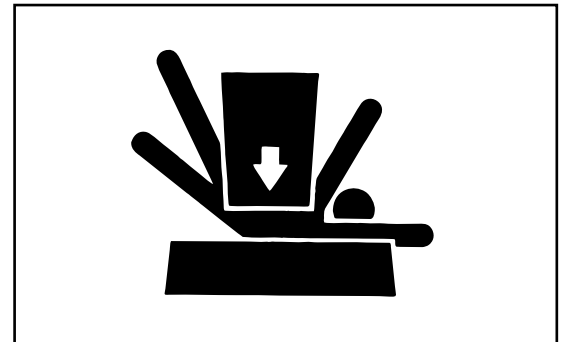**PREVENT TRACTOR RUNAWAY**

Avoid possible injury or death from tractor runaway.

 
NEVER start engine while standing on ground. Start engine only from operator's seat.

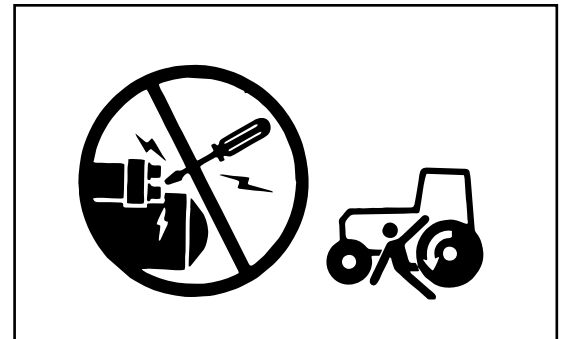**TRANSPORT TRACTOR SAFELY**

A disabled tractor is best transported on a flatbed carrier. Use chains to secure the tractor to the carrier. The axles and tractor frame are suitable attachment points.

Before transporting the tractor on a low-loader truck or flatbed rail wagon, make sure that the bonnet is secured over the tractor engine.

 Never tow a tractor at a speed greater than 10 km/h (6 mph). An operator must steer and brake the tractor under tow.

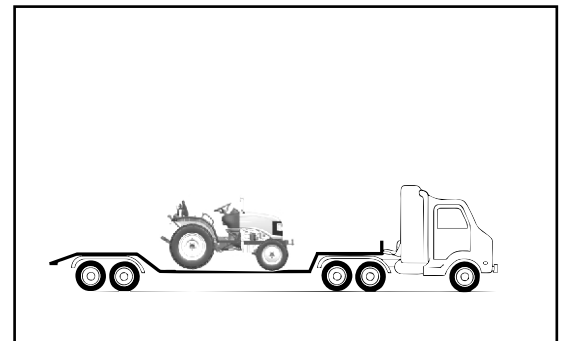



**SERVICE TIRES SAFELY**

Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

 
Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims, or missing lug bolts and nuts.


**TIGHTENING WHEEL RETAINING BOLTS/NUTS**

Torque wheel retaining bolts/nuts at the intervals specified in the Maintenance section.

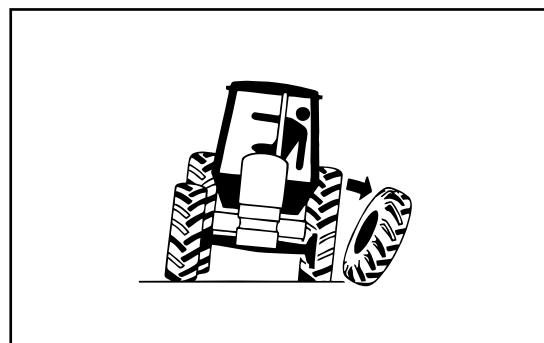**STORE ATTACHMENTS SAFELY**


Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

 Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

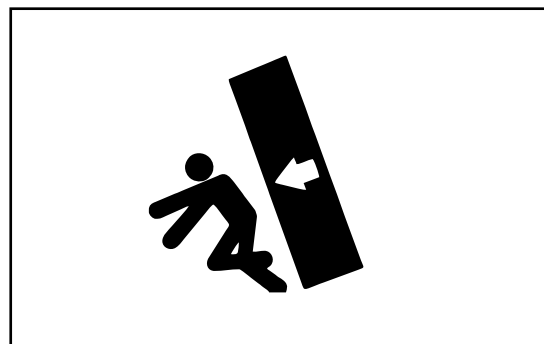**DISPOSE OF WASTE PROPERLY**

It is illegal to pollute drains, water courses or soil. Use authorized waste disposal facilities, including civic amenity sites and garages providing facilities for disposal of used oil. If in doubt, contact your local authority for advice.

 To get to know the correct methods to dispose of oils, filters, tyres etc. contact your Dealer or the local agency for waste recycling.


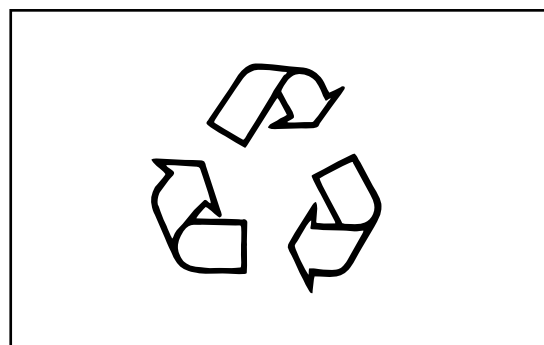


**DISPOSAL OF THE TRACTOR:**

The tractor is made up of parts subjected to rules and laws for their disposal. When the tractor is not used any more, it must be disposed of through proper agencies according to such rules. Do not pollute the environment with the tractor or its parts.



**SAFETY WHILE OPERATING LOADER ATTACHMENTS**

  - The equipment must only be used by authorised and trained personnel who, beforehand, must read and understand these instructions and become familiar with the equipment controls and their operation.
- Before operation, check all functions of the equipment and attachment going to be used.
- The equipment must be used by people aged more than 18 years, having the qualities required by the national legislation.
- Before or during work, do not take alcoholic beverages, medicines or other substances that may alter your psycho-physical conditions and affect your working abilities.
- The equipment must only be used for the applications intended by the manufacturer. An improper use may cause serious damage and injury.
- Always check the weight and nature of the load to be handled and the stability of the tractor in relation to the ground conditions.
- Couple the equipment only to tractors fitted with adequate rollover protective structures.
- Do not use the equipment on steep slopes.
- Before pressuring the hydraulic circuit of the equipment, make sure that the hydraulic hoses are intact and properly connected.
- Do not use the equipment to lift or transport people.
- Do not use the equipment as a working platform.
- Never transit or halt under suspended loads or under parts of the equipment supported solely by hydraulic jacks or ropes.
- Do not use the equipment if problems or anomalous vibrations are noticed.

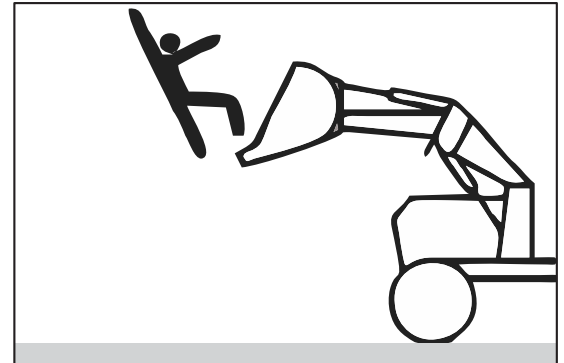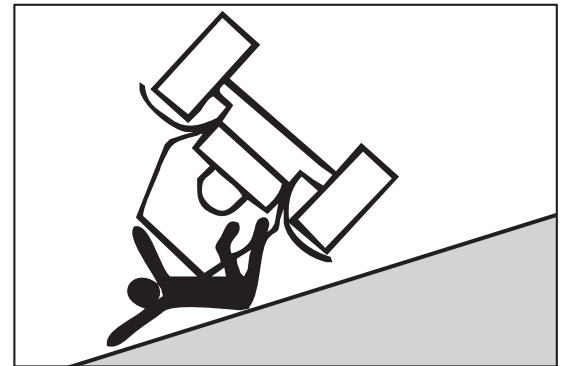

- Do not use the equipment to handle loads without using an appropriate attachment; for instance, do not use a bucket to lift a round bale. Be very careful to raised loads.

**FOR INSTRUCTIONS AND SAFETY RULES FOR OPERATING LOADER, FOLLOW INSTRUCTIONS AVAILABLE ON LOADER'S OPERATOR MANUAL.**

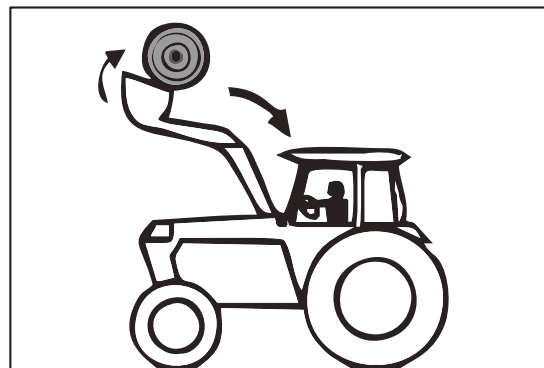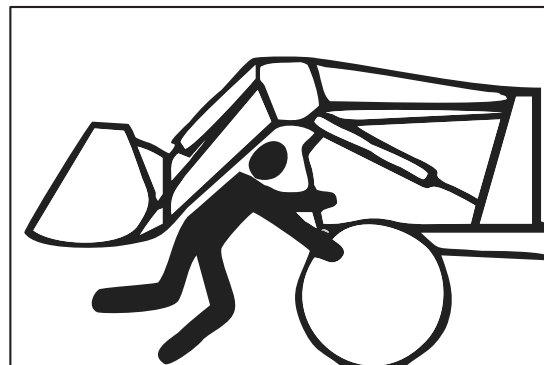  

## **SAFETY FROM LIGHTNING STRIKE**



Lightning strikes injure and kill hundreds of people each year. Follow these precautions to help keep you safe when the weather turns bad:

- As soon as you hear thunder, shut off and put away equipment and move indoors. When you are able to hear thunder, you can be struck by lightning. Lightning can strike even when it's not raining.
- A sturdy building provides the best protection.
- Listen to the radio for weather updates and storm warning.

 
## **NOISE & VIBRATION LEVELS**

The value of the noise at the operator's ear, measured according to standard 167/2013 (EU) and/or as per Directive 2009/76/EC(1) of the European Parliament and of the Council and the noise of the tractor in motion measured according to Annex VI to Directive 2009/63/EC (2) of the European Parliament and of the Council and/or 167/2013 (EU): Operator ear level:- Less than 86 dB. Noise at By standard level (when tractor is in motion & when tractor is stationary):- Less than 85 dB.

The value of the vibration level measured according to standard 167/2013 (EU) and/or according to Council Directive 78/764/EEC(3) is less than 1.25 m/s<sup>2</sup>.

## 2.9 Safety Warning & General Information Labels on Tractor

### 1). No-text Safety Signs on LHS Fender

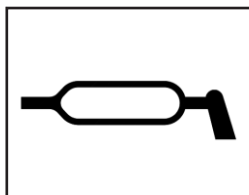

Grease Lubrication Point




Carefully read operator's manual before handling the tractor.



Observe instructions & safety rules when operating.


1. ■ ■ ■ ■

## 2). Safety Label on LHS Fender for No rider

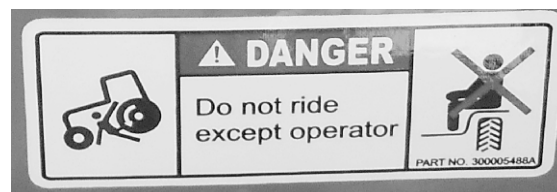 

2. ■ ■ ■ ■

## 3). Safety Label on LHS Fender for No rider

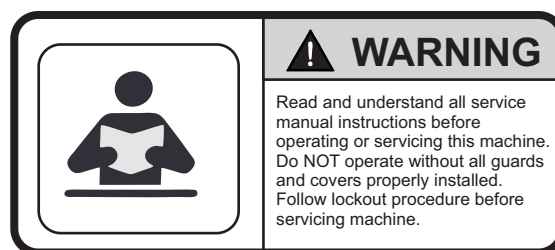 

3. ■ ■ ■ ■

## 4). Information Signs for Seat Adjustment



Seat - Longitudinal adjustment (Fore/aft)



 
Seat - Weight adjustment



Seat - Height adjustment (Up/down)



4. ■ ■ ■ ■

5). Information Sticker on Bonnet showing location of Bonnet Lock

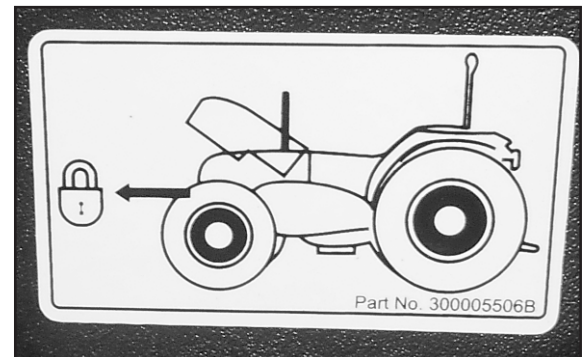

5. ■ ■ ■ ■

  6). Information Sticker for Jack or Support Point Location

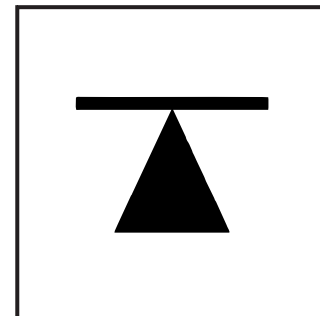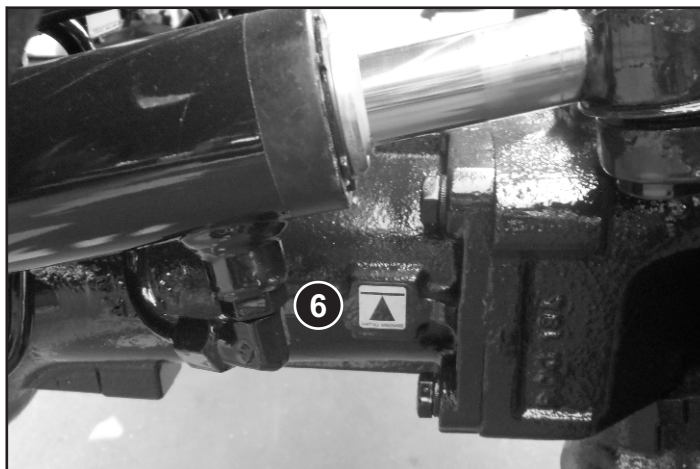

6. ■ ■ ■ ■