

PROBLEM	POSSIBLE CAUSE	REMEDY
ENGINE		
Engine not starting	Wrong way of starting engine	Use proper way of starting
	No fuel	Check Fuel level
	Air trapped in fuel system	Bleed the fuel system
	Checking of fuel system	Contact your dealer
	Fuel injector faulty	Replace
	Fuel filter chock	Replace filters
Engine not running in proper way	Fuel filter chock	Replace filters
	Low quality of oil	Drain diesel from tank and fill clean diesel
	Choking of fuel system	Check fuel system
	Fuel injectors faulty	Contact your dealer
More oil consumption	Oil level is more than maximum level	Keep oil level up to mark
	Oil quality is not good	Use genuine oil
Engine not giving maximum power	Leakage of oil	Check and repair
	Heavy load on engine	Decrease load or shift in low gear
	Air cleaner dirty	Clean air cleaner
	Fuel filter chock	Replace filter
	Engine overheating	Check cooling system
	Engine operating temperature is less	Check thermostat
	Valve clearance not proper	Adjust through authorized dealer.
	Throttle system not working properly	Check & repair through authorized dealer.
Engine abnormal noise	Oil level less	Top up
	Oil pressure less	Check through authorized dealer
	Engine is overheated	Check and find reason
	Improper tappet setting	Adjust through authorized dealer
Oil pressure Indicator shows warning	Oil level is less	Top up oil up to level
	Oil quality is not good	Use genuine engine oil
	Oil pump not working	Check and repair through authorized dealer
Engine Over Heating	Radiator cap faulty	Replace with new one
	choked radiator fins /radiator mesh	Clean it
	Engine gets overload	Decrease load or shift to low gear
	Oil level is less	Top up to level
	Coolant level is less	Check level and leakage of system and top up
	Slippage of fan belt	Check belt tension
	Thermostat faulty	Replace
	Choking of cooling system	Clean the cooling system
	Water temp. Gauge not working	Check through dealer and faulty replace

PROBLEM	POSSIBLE CAUSE	REMEDY
ENGINE		
More Fuel Consumption	Air cleaner is dirty / choked	Clean air cleaner
	Overloading of engine	Reduce load or shift to low gear
	Improper valve clearance	Check and adjust
	Implement setting improper	Adjust it and take instrument from dealer for right
	Less engine temp	Check injectors and service
	Fuel injection nozzle faulty	Check and service through dealer
HYDRAULIC		
Linkage Goes Down Slowly	Bush tight	Contact your authorized dealer
	Response valve setting improper	Contact your authorized dealer
Linkage Not Lift Fully	Improper lift arm setting	Contact your authorized dealer
	Improper internal adjustment	Contact your authorized dealer
TPL Not Respond To Lifting While Operating Hydraulic Lever	Linkage connection not joint properly	Contact your authorized dealer
	Heavy load on linkage	Reduce load as per specification
Hydraulic System Not Working Properly	Response valve setting very low	Check valve by your dealer.
	Oil level low	Check and top up
	Hydraulic Strainer choked	Clean/Replace
	Hydraulic system faulty	Check through authorized dealer
	Hydraulic pump not working	Contact your authorized dealer
BRAKES		
Noise While Applying Brakes Tractor Goes in One Side	Wrong adjustment of brakes	Check & Adjust
Brakes Works When Fully Pressed	Wrong adjustment of brake pedal	Check and Adjust.
	Brake liner worn out	Contact your authorized dealer
ELECTRICAL		
Electrical System Not Working	Battery terminal loose or rusting of terminal	Clean and tight the terminals
	Less specific gravity	Replace or fill electrolyte up to level
Starter Motor Not Working.	Battery terminal loose / Battery discharged	Tightened / Recharge or replace battery
	Faulty starter motor	For repair contact your dealer
Battery Not Charging	Loose or rusted terminals	Clean and tight terminal
	Belt loose	Check belt tension
	Faulty battery	Replace

'WD / WD' Lever	54	Opening the Bonnet	53
Air Bleeding of Fuel System	71	Operator Presence Control (OPC)	50
Air Cleaner Clogging Indicator	40	Park Brake Indicator	40
Air Cleaner Maintenance	73	Parking Brake	61
Alphabetical Index	92	Parking Brake OPC	50
Alternator	78	Parts Warning	17
Ballasting the Front Axle	64	Power Steering	60
Battery	47	Power Take off (PTO)	55
Battery and its Maintenance	77	Power take-off OPC	50
Battery Charge Indicator	40	PTO Monitor Lamp	42
Boarding & Leaving the Tractor	51	Radiator	71
Brake Pedal	74	Radiator Cap	72
Brake Pedal Free Play	74	Radiator Draining & Flushing (When cold)	72
Chassis Serial Number	14	Radiator Fins Cleaning	72
Check Wheel Nut Bolt	63	Radiator Mesh Cleaning	72
Checking Engine Oil Level	70	Recommended Oil grades & Application range	75
Cleaning of Suction Strainer	76	Registration Plate	48
Cold Start Indication	41	Replacement of Fuel Filter	71
Cold Weather Starting	51	Replacement of Oil Filter & Engine Oil	70
Coolant Level in Radiator (When Hot)	71	Response Valve	59
Cruise Control Indicator	43	Right Turn Indicator	41
Dashboard Controls	44	ROPS Certificate Plate	14
Differential Lock Pedal	60	Running in	52
DO'S AND DON'TS	86	Safety Frame: Roll Over Protection Structure (ROPS)	66
Driver's Seat	49	Safety From Lightning Strike	34
Engaging and Dis-engaging Cruise Operation	54	Safety Notes	18-37
Engine	51	Safety While Operating Loader Attachments	33
Engine RPM cum Hour Meter	41	Safety: Prepare For Safe Operation	19
Engine Serial Number	14	Service After Warranty	17
Fuel Gauge	43	Service Brake	60
Fuel Requisites	69	Service Record	91
Fuel Storage	69	Seven Pin Socket	47
Fuel Tank Filling	69	Speed Chart	61
Fueling	69	Speed Control Pedals	53
Fuse Box	46	Starter Motor	78
Fuses in Fuse Box	79	Starting the Engine	51
General Maintenance of Electrical System	77	Statutory Plate	14
Greasing Points	81	Steering Cylinder Knuckle Joints	74
Guidelines about Safety Sign	18	Stopping and Parking	52
Hand Throttle Lever	55	Technical Specifications	83
High Beam Indicator	41	Temperature Gauge	42
Hi-Low Lever	59	Three Point Linkage	64
Hydraulic Control Lever	64	Tractor Controls	38
Hydraulic Coupling Devices	58	Tractor Lights	48
Hydraulic Filter Replacement	76	Troubleshooting	89
If You Move	17	Turn Trailer Lamp	42
Inspection of Hoses	73	Turning off the Engine	52
Instrument Panel	39	Under Hood Muffler	53
Introduction	16	Universal Symbols	15
Jack Up the Tractor - Lifting Points	82	Using Operator Manual	13
Left Turn Indicator	40	Warranty Procedure	17
Long Idle Period	80	Warranty, Pre-delivery and Installation	16
Maintenance Schedule	67	Wheels and Tyres	62
Matching Implements	84	Work Lamp Indicator	43
Noise & Vibration Levels	34		
Oil and Lubrication Chart	82		
Oil Changes for Transmission, Rear Final Drives and Power Lift Hydraulic Circuits	75		
Oil Changes in WD Front Axle	74		
Oil Pressure Indicator	42		